

**Attention! All previous settings will be replaced by the basic settings Single Office!**

**Step 1: Activate programming mode**

Keep the programming key [5] pressed (>0.5s).  
LED [1] starts flashing red.

**Step 2: Select mode**

Briefly press the Single-Office button [4] (<0.5s).  
DALI luminaires flash 1 time.

**Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–**

Activate daylight harvesting by pressing Auto setup [7].  
Luminaires dim to 80% and sensor value stored as target light intensity.  
Note: Set-up only in the evening/night-time with little or no daylight.  
Set-up duration is about 3 min. LED [2] will flash red/green during that period.

**Daylight harvesting - save set value for daylight harvesting manually**

Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] shortly.  
Daylight harvesting will be activated.  
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.  
Note: Set-up only in the evening/night-time with little or no daylight.

**Step 4: Exit programming mode**

Briefly press the programming key [5] (<0.5s).  
LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.

**Basic Settings Single Office:**

- Light level of the two DALI channels: 80%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Stand-by: Off
- Daylight harvesting: ON (Not active until set value is stored!)
- Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

**Optional settings (individually configurable)**

**Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
LED [1] starts flashing red.

**Absence Switch-off delay time**

e.g. Briefly press the 30sec key [3] for a delay time of 30sec.  
Note: 1sec test is purely a test function (Do not use)!

**Absence Stand-by-level**

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

**Absence Stand-by delay time**

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
Note: Not possible if Stand-by level is set on OFF.

**Daylight harvesting activation/deactivation**

e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.  
Note: Default On (See DALleco control manual for details).  
Use full automatic mode only in combination with motion detection.

**Motion Sensor activation/deactivation**

e.g. Briefly press the Off-button [13] to deactivate motion detection.  
Note: Default ON (See manual for details).

**Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**

LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.


**Adjust Offset (not adjustable in the programming mode)**

- Briefly press the Offset key [6] to start.
- Change Offset level with the CH-2 key [8].
- Briefly press the Offset key [6] to save and end.

Note: Only available in combination with the daylight harvesting.  
Offset adjustment of CH-2 only between the CH-1 value and the stored set value.  
Adjust Offset with sufficient daylight only.

**Note: Further information on the individual functions and settings can be found in the DALleco control user guide.**

## Quick Start Guide Open-Plan Office Mode

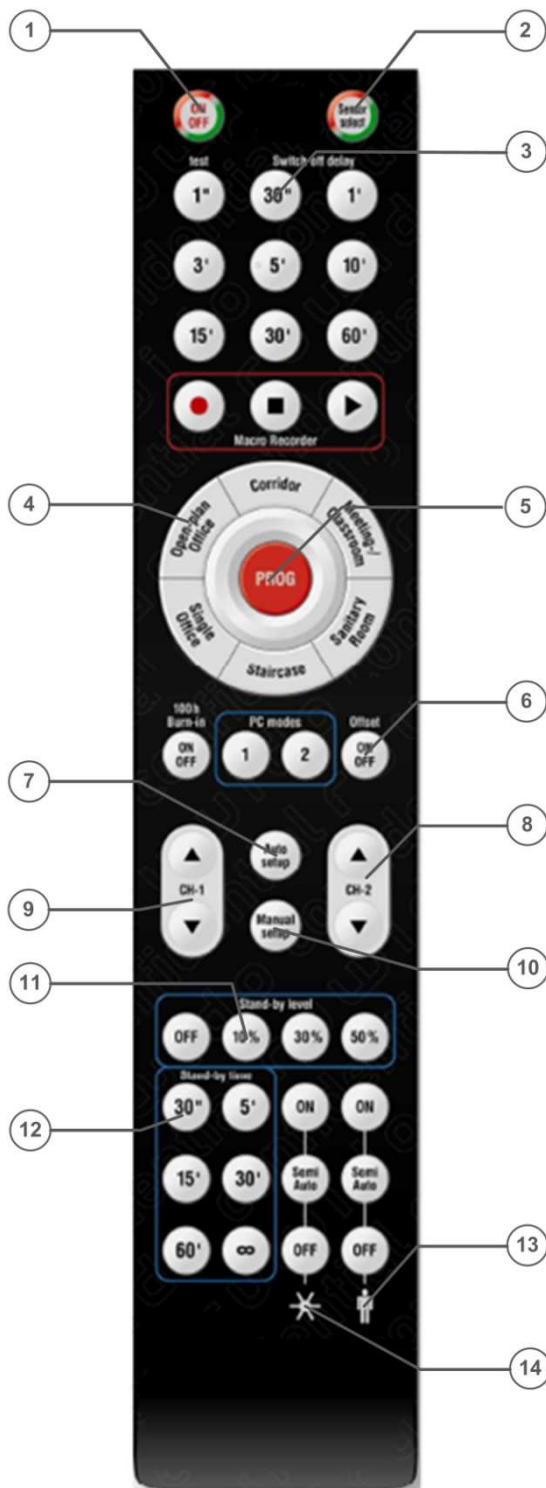

**Attention! All previous settings will be replaced by the basic settings Open-plan Office!**

- Step 1: Activate programming mode**  
Keep the programming key [5] pressed (>0.5s).  
LED [1] starts flashing red.
- Step 2: Select mode**  
Briefly press the Open-plan Office button [4] (<0.5s).  
DALI luminaires flash 1 time.
- Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–**  
Activate daylight harvesting by pressing Auto setup [7].  
Luminaires dim to 80% and sensor value stored as target light intensity.  
Note: Set-up only in the evening/night-time with little or no daylight.  
Set-up duration is about 3 min. LED [2] will flash red/green during that period.
- Daylight harvesting - save set value for daylight harvesting manually**  
Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] shortly.  
Daylight harvesting will be activated.  
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.  
Note: Set-up only in the evening/night-time with little or no daylight.
- Step 4: Exit programming mode**  
Briefly press the programming key [5] (<0.5s).  
LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.


- Basic Settings Single Office:**
- Light level of the two DALI channels: 100%
  - Power up: By movement, push button or remote control
  - Turn off: Automatic, push button or remote control
  - Absence Switch-off delay time: 15min.
  - Stand-by level: 30% of the stored set value
  - Absence Stand-by delay time: 60min.
  - Daylight harvesting: ON (**Not active until set value is stored!**)
  - Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

**Optional settings (individually configurable)**

- Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
LED [1] starts flashing red.
- Absence Switch-off delay time**  
e.g. Briefly press the 30sec key [3] for a delay time of 30sec.  
Note: 1sec test is purely a test function (Do not use)!
- Absence Stand-by-level**  
e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.
- Absence Stand-by delay time**  
e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
Note: Not possible if Stand-by level is set on OFF.
- Daylight harvesting activation/deactivation**  
e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.  
Note: Default On (See DALleco control manual for details).  
Use full automatic mode only in combination with motion detection.
- Motion Sensor activation/deactivation**  
e.g. Briefly press the Off-button [13] to deactivate motion detection.  
Note: Default ON (See manual for details).
- Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**  
LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.

- Adjust Offset (not adjustable in the programming mode)**
- Briefly press the Offset key [6] to start.
  - Change Offset level with the CH-2 key [8].
  - Briefly press the Offset key [6] to save and end.
- Note: Only available in combination with the daylight harvesting.  
Offset adjustment of CH-2 only between the CH-1 value and the stored set value.  
Adjust Offset with sufficient daylight only.

**Note: Further information on the individual functions and settings can be found in the DALleco control user guide.**

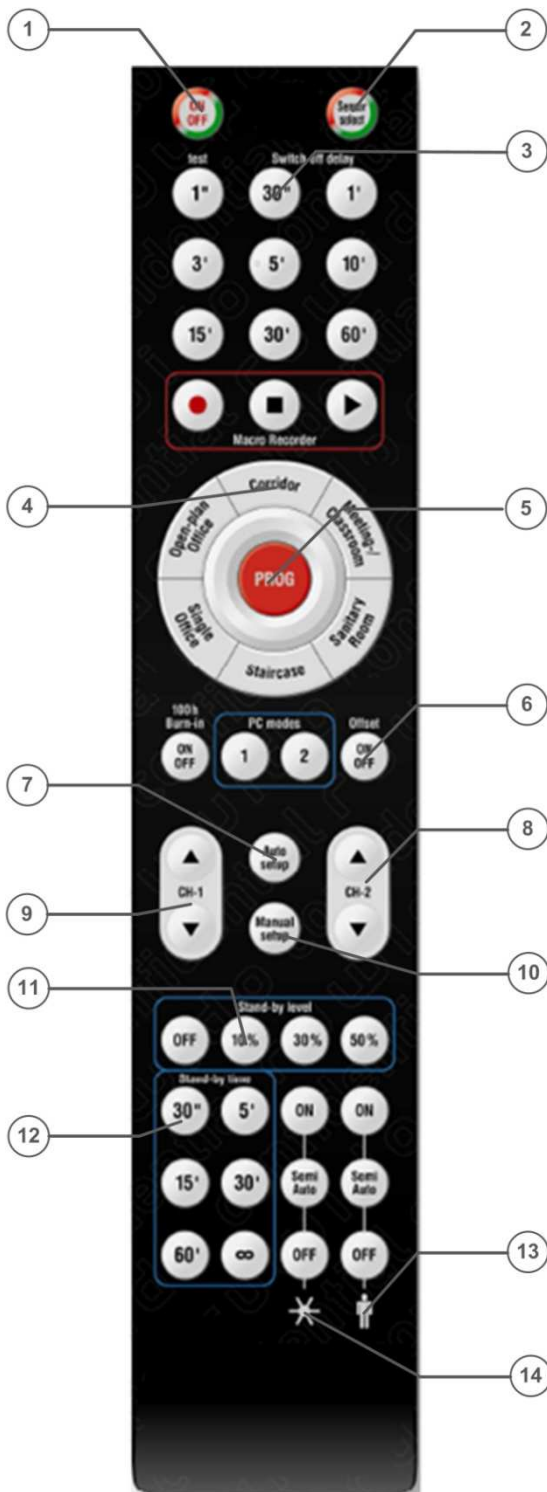

**Attention! All previous settings will be replaced by the basic settings Corridor mode!**

- Step 1: Activate programming mode**  
Keep the programming key [5] pressed (>0.5s).  
*LED [1] starts flashing red.*
- Step 2: Select mode**  
Briefly press the Corridor mode button [4] (<0.5s).  
*DALI luminaires flash 1 time.*
- Step 3: Exit programming mode**  
Briefly press the programming key [5] (<0.5s).  
*LED [1] turns off.*  
*Note: Programming mode will exit 60s after the last key press by default.*


- Basic Settings Single Office:**
- Light level of the two DALI channels: 100%
  - Power up: By movement, push button or remote control
  - Turn off: Automatic before Stand-by, push button or remote control
  - Absence Switch-off delay time: 5min
  - Stand-by level: 10%
  - Absence Stand-by delay time: permanent on
  - Daylight harvesting: Deactivated
  - Offset: Mode deactivated

**Optional settings (individually configurable)**

- Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
*LED [1] starts flashing red.*
- Adapt brightness value**  
Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] briefly.  
*DALI luminaires flash 2 times; LED [2] will flash red/green during that period.*  
*Note: The value last saved will be called up when switched on again.*
- Absence Switch-off delay time**  
e.g. Briefly press the 30sec key [3] for a delay time of 30sec.  
*Note: 1sec test is purely a test function (Do not use)!*
- Absence Stand-by-level**  
e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.
- Absence Stand-by delay time**  
e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
*Note: Not possible if Stand-by level is set on OFF.*
- Motion Sensor activation/deactivation**  
e.g. Briefly press the Off-button [13] to deactivate motion detection.  
*Note: Default ON (See manual for details).*
- Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**  
*LED [1] turns off.*  
*Note: Programming mode will exit 60s after the last key press by default.*

**Note: Daylight harvesting can be activated additional. For details see DALleco control user guide.**  
**Offset can only be activated in combination with daylight harvesting.**

**Note: Further information on the individual functions and settings can be found in the DALleco control user guide.**

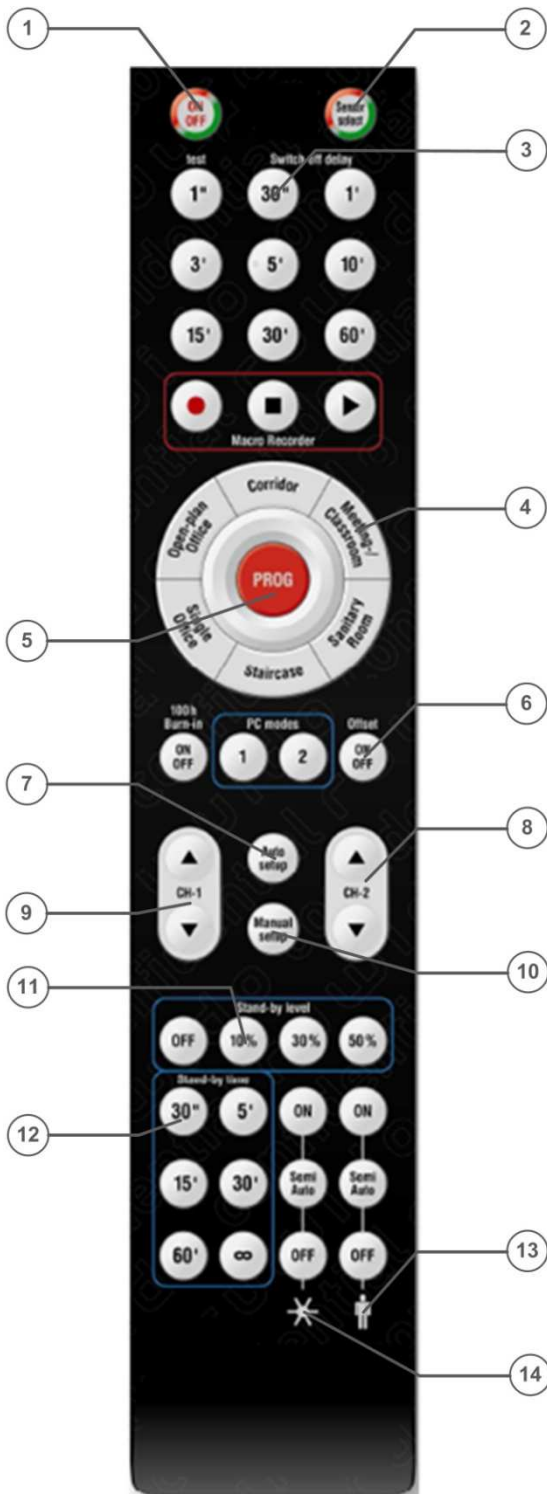

**Attention! All previous settings will be replaced by the basic settings Meeting-/Classroom mode!**

- Step 1: Activate programming mode**  
Keep the programming key [5] pressed (>0.5s).  
LED [1] starts flashing red.
- Step 2: Select mode**  
Briefly press the Meeting-/Classroom button [4] (<0.5s).  
DALI luminaires flash 1 time.
- Step 3: Daylight harvesting - save set value for daylight harvesting automatically –OR–**  
Activate daylight harvesting by pressing Auto setup [7].  
Luminaires dim to 80% and sensor value stored as target light intensity.  
Note: Set-up only in the evening/night-time with little or no daylight.  
Set-up duration is about 3 min. LED [2] will flash red/green during that period.
- Daylight harvesting - save set value for daylight harvesting manually**  
Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] shortly.  
Daylight harvesting will be activated.  
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.  
Note: Set-up only in the evening/night-time with little or no daylight.
- Step 4: Exit programming mode**  
Briefly press the programming key [5] (<0.5s).  
LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.


- Basic Settings Single Office:**
- Light level of the two DALI channels: 80%
  - Power up: By movement, push button or remote control
  - Turn off: Automatic, push button or remote control
  - Absence Switch-off delay time: 15min.
  - Stand-by: Off
  - Daylight harvesting: ON (Not active until set value is stored!)
  - Offset: +30% for CH-2 (Does not show up until daylight harvesting is dimming CH-1)

**Optional settings (individually configurable)**

- Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
LED [1] starts flashing red.
- Absence Switch-off delay time**  
e.g. Briefly press the 30sec key [3] for a delay time of 30sec.  
Note: 1sec test is purely a test function (Do not use)!
- Absence Stand-by-level**  
e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.
- Absence Stand-by delay time**  
e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
Note: Not possible if Stand-by level is set on OFF.
- Daylight harvesting activation/deactivation**  
e.g. Briefly press the Off-button [14] to deactivate daylight harvesting.  
Note: Default On (See DALleco control manual for details).  
Use full automatic mode only in combination with motion detection.
- Motion Sensor activation/deactivation**  
e.g. Briefly press the Off-button [13] to deactivate motion detection.  
Note: Default ON (See manual for details).
- Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**  
LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.

- Adjust Offset (not adjustable in the programming mode)**
- Briefly press the Offset key [6] to start.
  - Change Offset level with the CH-2 key [8].
  - Briefly press the Offset key [6] to save and end.
- Note: Only available in combination with the daylight harvesting only.  
Offset adjustment of CH-2 only between the CH-1 value and the stored set value.  
Adjust Offset with sufficient daylight only.

**Note: Further information on the individual functions and settings can be found in the DALleco control user guide.**

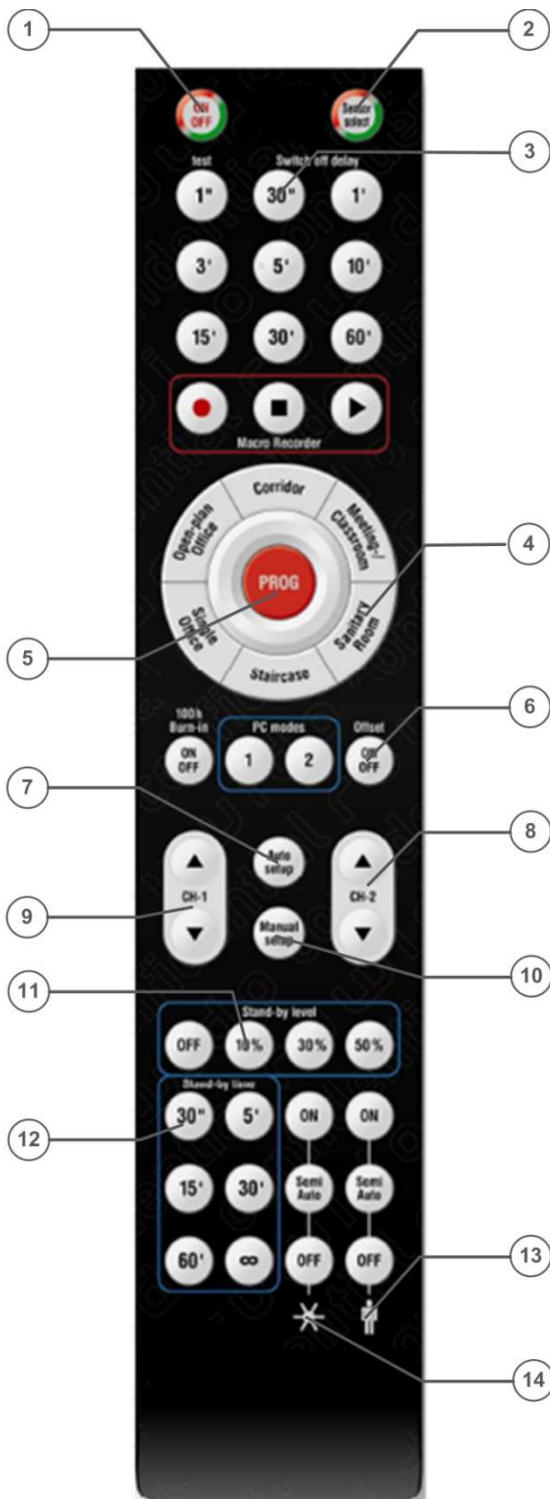

**Attention! All previous settings will be replaced by the basic settings Sanitary Room mode!**

**Step 1: Activate programming mode**

Keep the programming key [5] pressed (>0.5s).  
LED [1] starts flashing red.

**Step 2: Select mode**

Briefly press the Sanitary Room mode button [4] (<0.5s).  
DALI luminaires flash 1 time.

**Step 3: Exit programming mode**

Briefly press the programming key [5] (<0.5s).  
LED [1] turns off.

Note: Programming mode will exit 60s after the last key press by default.

**Basic Settings Single Office:**

- Light level of the two DALI channels: 100%
- Power up: By movement, push button or remote control
- Turn off: Automatic, push button or remote control
- Absence Switch-off delay time: 15min.
- Absence Stand-by delay time: 5min.
- Stand-by level: 30%
- Daylight harvesting: Deactivated
- Offset: Mode deactivated

**Optional settings (individually configurable)**

**Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
LED [1] starts flashing red.

**Adapt brightness value**

Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] briefly.  
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.  
Note: The value last saved will be called up when switched on again.

**Absence Switch-off delay time**

e.g. Briefly press the 30sec key [3] for a delay time of 30 sec.  
Note: 1sec test is purely a test function (Do not use)!

**Absence Stand-by-level**

e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.

**Absence Stand-by delay time**

e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
Note: Not possible if Stand-by level is set on OFF.

**Motion Sensor activation/deactivation**

e.g. Briefly press the Off-button [13] to deactivate motion detection.  
Note: Default ON (See manual for details).


**Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**

LED [1] turns off.  
Note: Programming mode will exit 60s after the last key press by default.

**Note: Daylight harvesting can be activated additional. For details see DALleco control user guide.**

**Offset can only be activated in combination with daylight harvesting.**

Note: Further information on the individual functions and settings can be found in the DALleco control user guide.

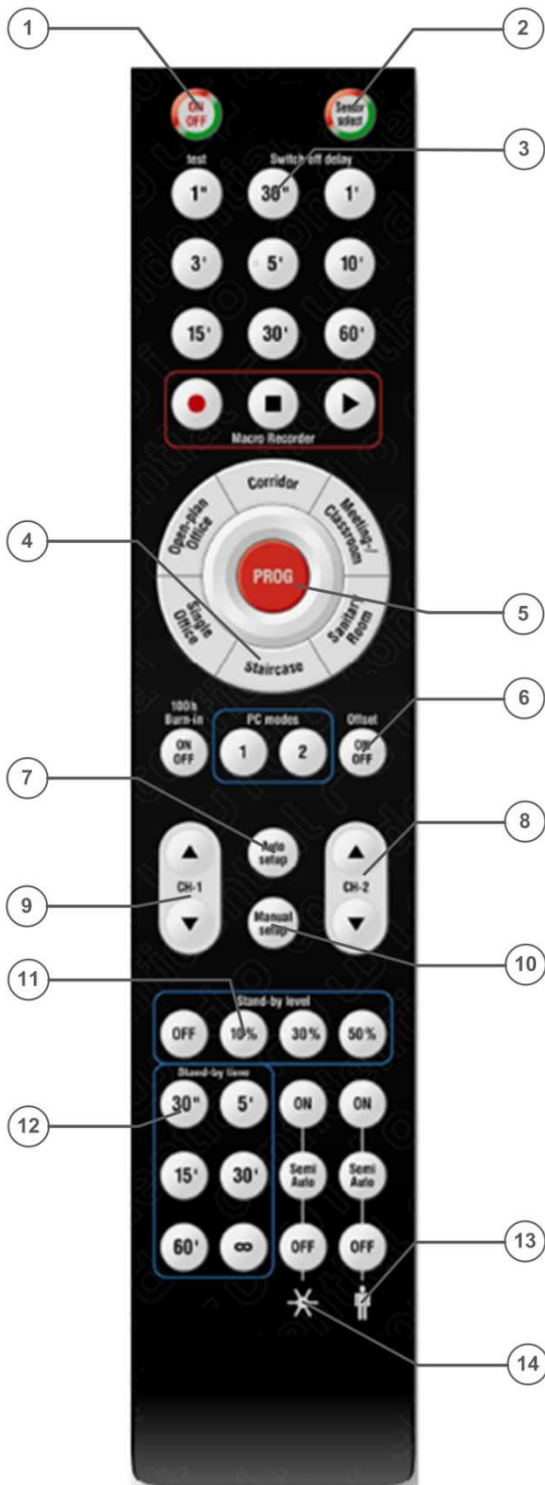

**Attention! All previous settings will be replaced by the basic settings Staircase mode!**

- Step 1: Activate programming mode**  
Keep the programming key [5] pressed (>0.5s).  
LED [1] starts flashing red.
- Step 2: Select mode**  
Briefly press the Staircase mode button [4] (<0.5s).  
DALI luminaires flash 1 time.
- Step 3: Exit programming mode**  
Briefly press the programming key [5] (<0.5s).  
LED [1] turns off.  
*Note: Programming mode will exit 60s after the last key press by default.*

- Basic Settings Single Office:**
- Light level of the two DALI channels: 100%
  - Power up: By movement, push button or remote control
  - Turn off: Automatic, push button or remote control
  - Absence Switch-off delay time: 5min.
  - Absence Stand-by delay time: 1min.
  - Standby level: 50%
  - Daylight harvesting: Deactivated
  - Offset: Mode deactivated

**Optional settings (individually configurable)**

- Start with long press (>0.5s) of the programming key [5]. (Start programming mode)**  
LED [1] starts flashing red.
- Adapt brightness value**  
Set brightness value by pressing the buttons CH-1 [9] up/down.  
Confirm by pressing the Manual setup key [10] briefly.  
DALI luminaires flash 2 times; LED [2] will flash red/green during that period.  
*Note: The value last saved will be called up when switched on again.*
- Absence turn-off delay time**  
e.g. Briefly press the 30sec key [3] for a delay time of 30 sec.  
*Note: 1sec test is purely a test function (Do not use)!*
- Absence Stand-by-level**  
e.g. Briefly press the 10% key [11] for a 10% brightness of the stored light value.
- Absence Stand-by delay time**  
e.g. Briefly press the 30sec key [12] for a 30sec delay time of Stand-by before switch-off.  
*Note: Not possible if Stand-by level is set on OFF.*
- Motion Sensor activation/deactivation**  
e.g. Briefly press the Off-button [13] to deactivate motion detection.  
*Note: Default ON (See manual for details).*
- Exit with short press (<0.5s) of the programming key [5]. (End programming mode)**  
LED [1] turns off.  
*Note: Programming mode will exit 60s after the last key press by default.*

**Note: Daylight harvesting can be activated additional. For details see DALleco control user guide.**  
**Offset can only be activated in combination with daylight harvesting.**

**Note: Further information on the individual functions and settings can be found in the DALleco control user guide.**